




RSD FORK DUST CAP INSTALLATION

1. Turn your motorcycle off, place securely on a lift or side stand.
2. Remove the calipers and front wheel. Loosen the pinch bolts on both forks and slide the forks out
NOTE: Consult your HD service manual for specific instructions.

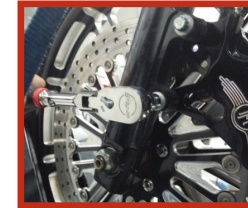

3. With the forks now off the bike remove the stock dust cap.
NOTE: Consult your HD service manual for specific instructions.



4. Install the RSD Fork Dust Cap by sliding it over the inner tube and pressing straight down. Be sure to apply even pressure all around, both O rings need to clear the groove.
NOTE: Use very light lube if you are unable to seat both O rings.



5. Reinstall the forks, wheel and calipers.
NOTE: Consult your HD service manual for specific instructions
6. Hit the road!

PRODUCT DESCRIPTION

39mm Dust Cap

MISANO

0208-2086

TRACKER

0208-2087

41mm Dust Cap

MISANO

0208-2088

TRACKER

0208-2089

49mm Dust Cap

MISANO

0208-2090

TRACKER

0208-2091

For questions pertaining to the installation of this product, please contact the Performance Machine technical department at 1-800-479-4037. This product is manufactured in the USA by Performance Machine LLC.