



# Mounting Suggestions

## Harley-Davidson® Sportster 1982 - 2003

### Passenger Seat



#### Tools Required:

- Phillips Screwdriver
- Allen Wrench Set
- SAE Open Open-End Wrenches

#### Baseplate Features:

Baseplates are made of black powder coated 16 gauge steel. Polyurethane rubber bumpers protect the motorcycle and soften vibrations. Passenger seat base is carpeted.

#### Hardware:


- Chrome Spool Washer (Included)
- 1982-1995 Models
- Chrome 1/4"-28 x 1" Bolt (Fine thread)(Included)
  - White Nylon Washer (Included)
- 1996-2003 Models
- Chrome 1/4"-20 X 1" Bolt (Coarse thread) (Included)
  - Black Nylon Washer (Included)

Note: Replace the Phillips head screw that secures the back of the solo seat with one of the included longer socket head bolts. Use the 1/4"-28x1" (Fine thread) bolt for 1982-1995 models and the 1/4"-20x1" (Coarse thread) bolt for the 1996-2003 models.

(Fig. I): The new Chrome Spool Washer (A) goes on top of the solo rear bracket. For 1996-2003 Models ONLY: Use the supplied washer (B) under the mounting tab.

**NOTE:** Mustang rear seat cannot be installed behind stock front seat.

Fig. I

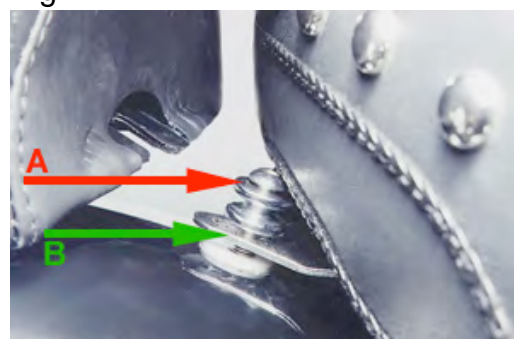

#### Mounting of Mustang Seat

1. Engage slotted front of passenger seat into the spool washer.
2. Install supplied washer between chrome rear bracket and fender.
3. Secure back end of passenger seat to the fender with stock fender screw to complete the installation process.

#### Enjoy the Comfort of your new Mustang Seat!



These steps are guidelines to help you install your new Mustang product. If you need further assistance please call us at 800-243-1392, Monday through Friday 9:00 - 5:30 Eastern or send an e-mail to [questions@mustangseats.com](mailto:questions@mustangseats.com) or visit our website [www.mustangseats.com](http://www.mustangseats.com).

For care and maintenance of our seats, please go to our website under "Support".

Refers to part numbers: 75482, 75491, 75456, 75118, 75707, 75708, 79116, 79136